



## CONVERSION INSTRUCTIONS CONTROL

### TYP 2100 TO TYP 2200


The following conditions must be fulfilled before a change-over from the control "Typ 2100" to the control "Typ 2200".




Take notice of the safety instructions in the manual Typ 2200 before starting.

1. disconnection of the equipment
2. loosening of the wirings
3. dismounting of the control box Typ 2100
4. mounting of the control box Typ 2200
5. power supply directly connected to main switch
6. motor connection directly connected to power contactor for motor
7. connect the remaining wiring to the terminal strip → see wiring diagrams
8. rewiring of the differential-pressure-indicator due to broken wire monitoring → see photos (change over from 3 → 3a)
9. adjustment of the control voltage and power supply at the transformer according to customer requirements
10. starting of the equipment
11. conducting of the new parameter-adjustment

### Wiring of the differential-pressure-indicator

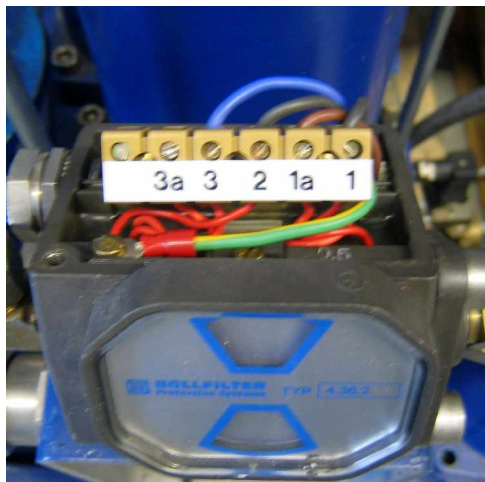

Typ 2100

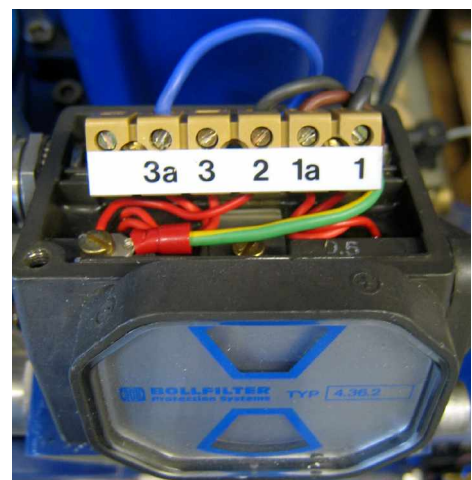

Typ 2200